PREMIER®

# *INSTRUCTION MANUAL*
# *PORTABLE DVD PLAYER WITH 7" TFT DISPLAY & TV RECEIVER*

## SX-4007TVD

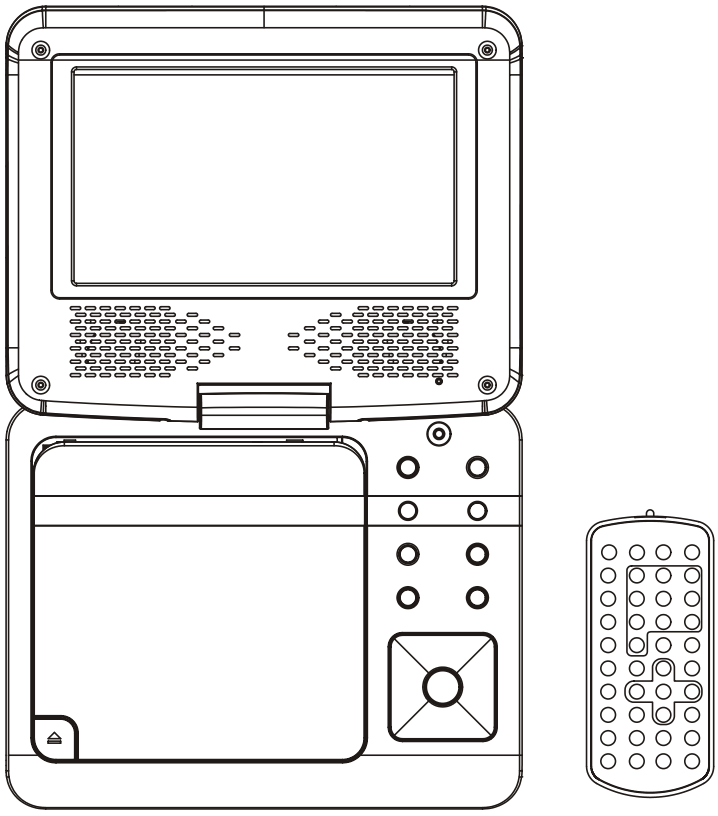

## *DEAR CUSTOMER*

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***

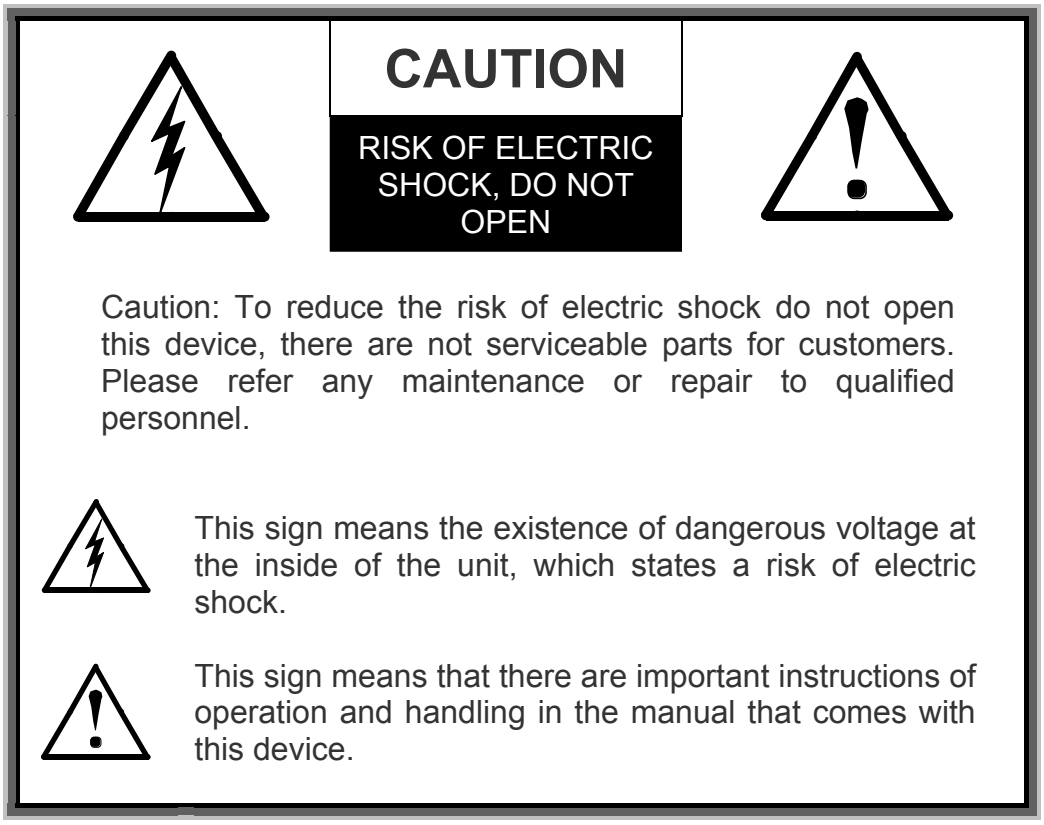
CAUTION
RISK OF ELECTRIC SHOCK, DO NOT OPEN
Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.
This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.
This sign means that there are important instructions of operation and handling in the manual that comes with this device.

## *PREMIER CUSTOMER SERVICE*

| | |
|---|---|
| **Venezuela:** | 0800 – ELECTRIC (353-2874) |
| **Colombia:** | 01-900-331-PEJC (7352) |
| **Panama:** | 300-5185 |
| **Website** | www.premiermundo.com |
| **E-mail:** | servicioalcliente@premiermundo.com |

**NOTE**
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

## OVERVIEW OF THE DVD PLAYER:

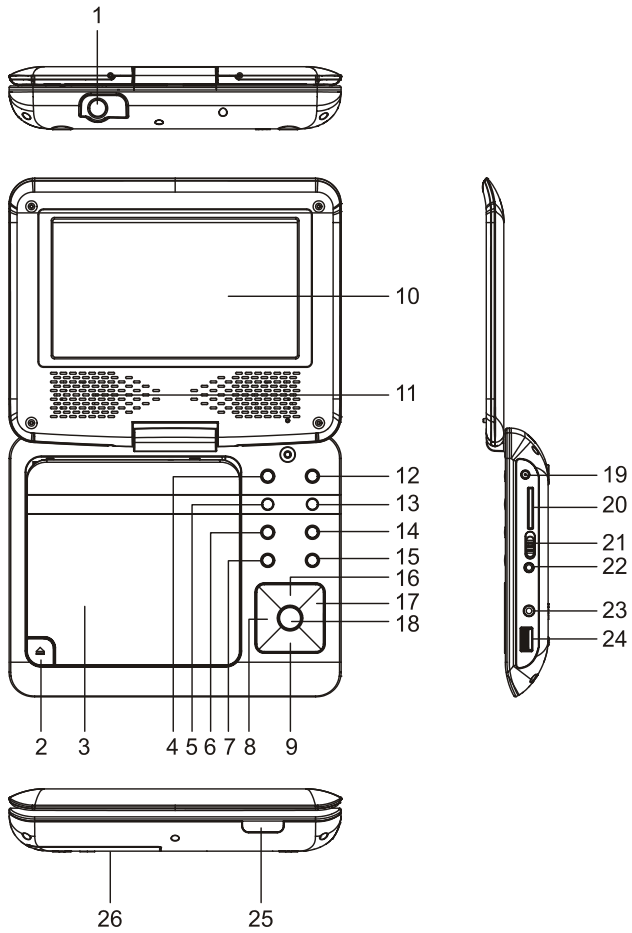


1. TV ANT JACK
2. DISC COVER OPEN BUTTON
3. DISC COVER
4. DVD/TV & SETUP BUTTON
5. PLAY/PAUSE BUTTON
6. PREVIOUS & F_BWD BUTTON
7. AUDIO BUTTON
8. VOLUME- & NAVIGATION LEFT BUTTON
9. CH-/NAVIGATION DOWN BUTTON
10. TFT SCREEN
11. SPEAKERS
12. DVD/USB/CARD BUTTON
13. STOP BUTTON
14. NEXT & F_FWD BUTTON
15. DISPLAY BUTTON
16. CH+/NAVIGATION UP BUTTON
17. VOLUME+ & NAVIGATION RIGHT BUTTON
18. OK BUTTON
19. DC IN JACK
20. SD/MMC CARD SLOT
21. POWER ON/OFF SWITCH
22. AV OUT JACK
23. PHONE JACK
24. USB PORT
25. CHARGE INDICATOR & REMOTE SENSOR & POWER INDICATOR
26. BATTERY COMPARTMENT

## REMOTE CONTROL UNIT

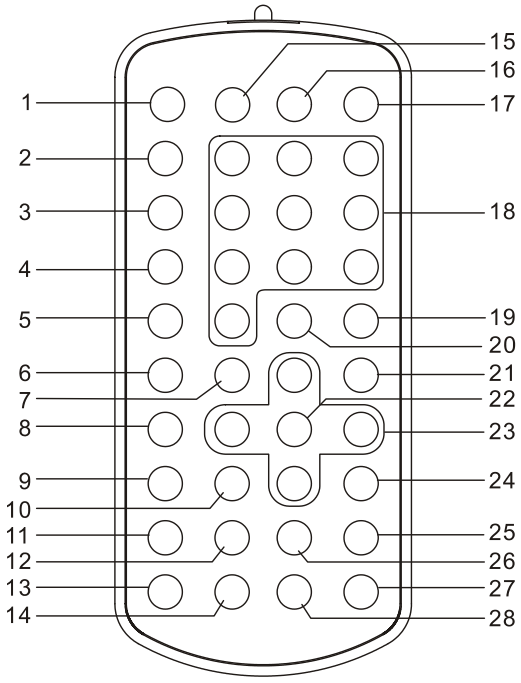


1. DVD/USB/CARD BUTTON
2. VOLUME + BUTTON
3. VOLUME - BUTTON
4. TITLE/RETURN BUTTON
5. DVD MENU (PBC) BUTTON
6. SUBTITLE BUTTON
7. AUDIO BUTTON
8. SLOW BUTTON
9. STEP BUTTON
10. STOP BUTTON
11. FAST BACKWARD BUTTON
12. FAST FORWARD BUTTON
13. TV/DVD BUTTON
14. ZOOM BUTTON
15. DISPLAY BUTTON
16. SETUP BUTTON
17. MUTE BUTTON
18. NUMERIC BUTTONS
19. REPEAT A-B BUTTON
20. REPEAT1/ALL BUTTON
21. ANGLE BUTTON
22. OK BUTTON
23. NAVIGATION BUTTONS (LEFT / RIGHT / DOWN&CH- / UP&CH+)
24. PLAY/PAUSE BUTTON
25. NEXT BUTTON
26. PREVIOUS BUTTON
27. GOTO BUTTON
28. PROGRAM BUTTON

# BASIC CONNECTION

- It is recommended to connect a multi-system TV.
- Ensure that this player and other equipment to be connected are set to OFF mode and disconnect the AC/DC adapter before commencing connection.
- Do not block ventilation holes of any of the equipment and arrange them so that air can circulate freely.
- Read through the instructions before connecting other equipment.
- Ensure that you observe the color coding when connecting audio, video cables. If the RCA adapter is supplied only, the audio/video RCA cable is required. Plug one end of the RCA adapter to the unit. Then connect the audio/video RCA cable to the RCA adapter and the television.

Note:

- During DVD play, the TV volume may be at a lower level than during TV broadcasts, etc. If this is the case, adjust the volume to the desired level.
- If the DVD/VCD/CD player is connected to the TV through a video cassette recorder, the picture may not be played back normally with some DVDs. If this is the case, do not connect the player via the VCR.

## CONNECTING TO A STEREO TV SET

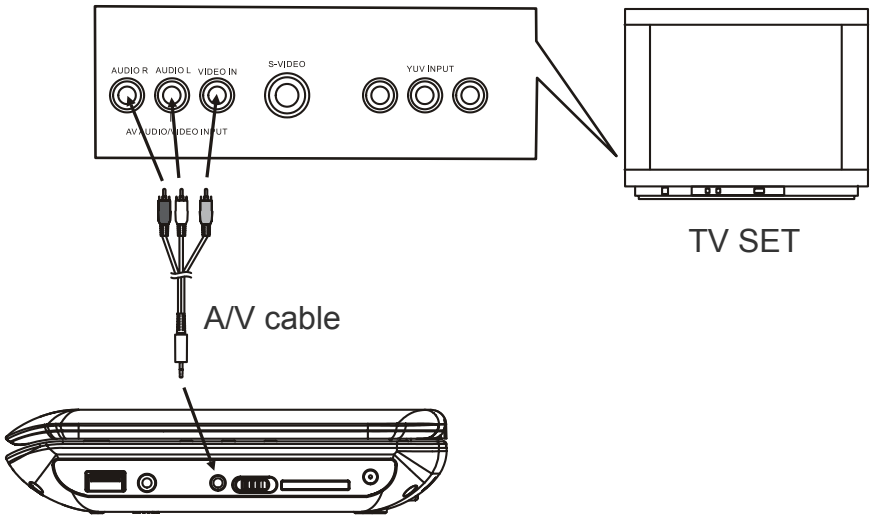


After connection is firmed and securely done, plug AC/DC adapter to an applicable wall outlet and turn on the player.

## CONNECTING THE AERIAL TO THE PLAYER

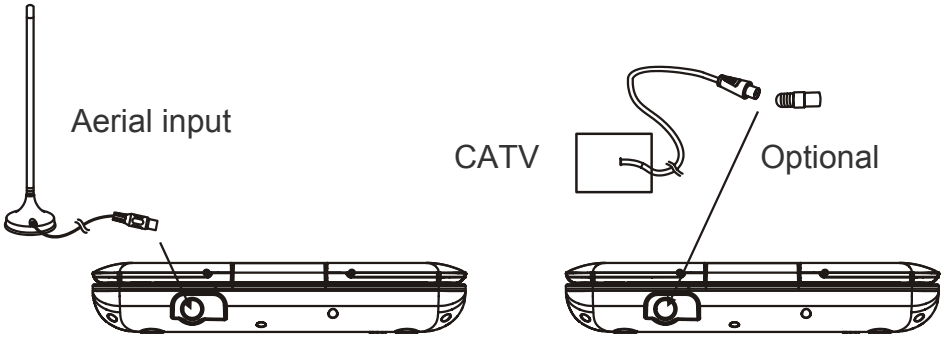

1. When this player is connect to the outdoor aerial, make sure that the TV programme is available from the signal tower.
2. The quality of video is depend on the signal strength.
3. When this player is connect to the outdoor aerial, in avoid that the huge buildings or obstacle would block the signal.

Note: In some areas the indoor aerial terminal may different, if the terminal is not fitted to your player, a connector is available for you to connect between CATV and player. Please refer to the above illustration.

## *CONNECTING TO A CAR ADAPTOR*

The car power adaptor is designed for use with vehicles that have a 12V, negative ground electrical system.

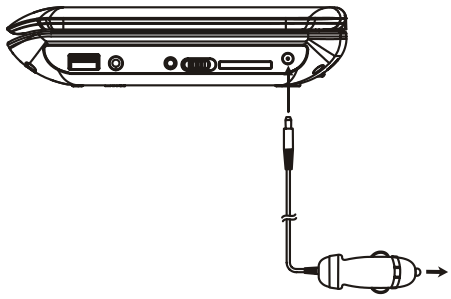


WARNING:
Disconnect the car power adaptor when not in use. Not in use in 24V vehicles.

**CAUTIONS:**

- Use the unit only with the recommended car power adaptor, use with other car power adaptor could damage the unit.
- The recommended car power adaptor is for use with this unit only. Do not use it with other equipment.
- In the interests of road traffic safety, do not operate the unit or view video software while driving a vehicle.
- Make sure the unit is fastened securely to prevent from moving outside of the vehicle in an accident
- When the inside of the cigarette lighter socket is dirty with ashes or dust, the plug section may become hot due to poor contact. Be sure to clean the cigarette lighter socket before use.
- After use, disconnect the car power adaptor from both the unit and cigarette lighter socket.

### *FUSE REPLACEMENT*

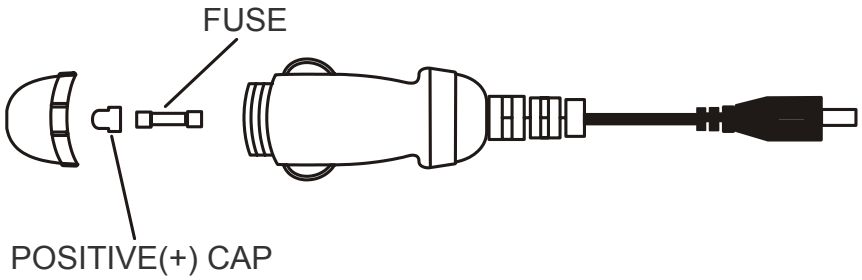


NOTE: Don't throw out the positive(+) cap when replace the fuse.

### CHARGE THE BUILT-IN BATTERY

The player is with a rechargeable lithium battery. Before using the battery, please make sure it is charged. If not, charge it first. Slide the power switch to OFF position and then connect one end of the supplied adapter to the wall outlet and the other end to the unit for charging the built-in battery. The charge current is 720mA, it takes about 2 hours to charge the battery fully. During charging, the charge indicator lights red, it will be turned off for indicating full charge.

Note: 1. The battery only could be charged at powering off mode.

2. If the unit is not in use for a prolonged period of time, it is recommendable to charge the built-in battery each three months.

## OPERATIONS

### PREPARATION

Power on the TV set and select video input mode.

Power on the audio system which is connected to the player.

### GET STARTED

1. Slide the POWER ON/OFF switch to turn on the player.
2. Press disc cover OPEN key to open the disc cover, and then place the disc onto the disc tray.
3. Close the disc tray and the playback starts automatically.
4. When a menu screen appears on the TV, move the navigation buttons to select a preferred track number, then press OK button to start playback.

### ADJUST THE VOLUME

During disc playback, press VOLUME+/- button to increase or reduce the volume level.

### SKIP AHEAD OR BACK

Press PREVIOUS or NEXT button once during play to skip a chapter (DVD) or a track (CD) ahead or backwards.

### RAPID ADVANCE/REVERSE

During playback, press and hold FAST BACKWARD or FAST FORWARD button on the unit or press FAST BACKWARD or FAST FORWARD on the remote several times to scan the disc forward or backward at X2, X4, X8, X16,X32 normal speed.

Press PLAY/PAUSE button to resume normal play.

### STOP PLAYBACK

Press STOP button during playback to stop playback; the player activates its resume function when STOP is pressed in STOP mode; press PLAY/PAUSE button again, playback resumes at the point it stopped previously; open the disc tray or press the STOP button one more time to clear the resume function.

### SLOW-MOTION PLAY (DVD)

Press SLOW button on the remote control during playback, the disc will be played at 1/2 normal speed at first, each time this button is pressed, the play speed becomes slower at 1/4, 1/8 and 1/16 speed.

## *STEP PLAY*

During playback, press STEP button to play one frame, each time the STEP button is pressed, the player will play a corresponding frame; to resume normal play, press PLAY/PAUSE button.

## *MUTE PLAY*

During playback, press MUTE button to shut the audio output off. To resume the normal play, press MUTE button again.

## *REPEAT*

Press REPEAT 1/ALL button during playback, it will repeat play one chapter/title or repeat all (for DVD disc), or repeat play a track or all tracks (CD), or press REPEAT A-B button to repeat play the sections between two specific points(A-B).

## *SEARCH FOR PREFERRED SCENE*

1. Press GOTO button several times during play to show different Search mode.
2. Input the desired number or time via the numeric buttons.
3. Press OK button to confirm and the playback from the located scene starts.
4. If not any input, the search menu will disappear automatically.

## *ON SCREEN DISPLAY INFORMATION*

When the player is in operation, press DISPLAY button continuously, the screen will display parts of information in a sequence.

## *CHANGING AUDIO SOUNDTRACK LANGUAGE (DVD)*

It is possible to change the audio soundtrack language to a different language from the one selected at the initial settings (This operation works only with discs on which multiple audio soundtrack languages are recorded).
Press AUDIO button to change the sound track language during DVD disc play.
NOTE: When no soundtrack languages are recorded, pressing this button will not work.

## *CHANGING SUBTITLE LANGUAGE (DVD ONLY)*

Press SUBTITLE button during playback, the subtitle language will change on the screen as a response to each press; When the desired language appears, release the button to view the subtitle in that language.
Note: this function only works on the DVDs recorded with multi-language subtitles.

## *RETURN TO MAIN MENU AND PLAY THE TITLE*

During playback, press DVD MENU button to return to the menu and press TITLE button to play the title.

## *ENJOYING VIDEO CDs WITH PBC FEATURE*

After loading a VCD 2.0/1.0 with PBC, the TV screen shows the Disc formats and then a menu.
Press MENU button to select PBC ON/OFF mode. When the PBC is on, press TITLE button to return back the VCD menu.
Press PREVIOUS or NEXT button once during play to skip a track ahead or backwards.
Press SLOW button on the remote control during playback, the Disc will be played at 1/2 normal speed at first, each time this button is pressed, the play speed becomes slower at 1/4, 1/8 and

1/16 speed.
Press REPEAT 1/ALL button during playback, it will repeat play a track or all tracks, or press REPEAT A-B button to repeat play the sections between two specific points(A-B).
Note: Repeat features for VCD Disc will only work in PBC off mode.
Pressing AUDIO button during VCD disc play will change audio output mode.

## *PROGRAM PLAY(UP TO 20 MEMORIES)*

1. Press PROGRAM during playback to display the program menu.
2. Select location(s) to be memorized via navigation buttons and then enter desired Titles/Chapters/tracks numbers via numeric buttons.
   Note: Some figure inputs may be useless, because it 's greater figure than total title/chapter/track number on the disc. To programme another ten tracks by selecting NEXT button. Up to 20 tracks can be programmed.
   Example: Track 3, press "0" and then"3"
   Track 12, press "1" and then "2"
   Track 21, press "2" and then "1"
3. To start programmed playback, scroll START on the menu and then press OK button.
4. To clear all programmed item, first of all, press PROGRAM button to enter the program menu, by now it will highlight STOP on the menu, press OK button once to confirm, then EXIT on the menu will be highlighted, press OK button again to clear all the programmed item.

## *ZOOM PLAY*

Press the ZOOM key continuously to zoom in the picture by 2, 3, and 4 times, or zoom out 1/2, 1/3, 1/4 of the normal playback size.
Scroll to view the enlarged picture using Navigation buttons.

## *MULTI-ANGLE Viewing (DVD only)*

Press ANGLE button during playback to select a desired angle to view the scene.
Note: only the DVDs shot with multi-angle scenes have this function.

## *MP3/MPEG 4 PLAYBACK*

1. Load the MP3/MPEG 4 disc onto the disc tray and the TV screen will show all its folders after a few seconds.
2. Select the folder you want by the navigation buttons and then OK button to confirm.
3. The files in this folder are displayed and select your favourable song via navigation buttons and press OK button to start playback.
4. Press NEXT and PREV button to select track directly.
5. Press REPEAT1/ALL button or REPEAT A-B button to change play mode.
6. During Mp3 playback, press VOLUME+/- button on the remote or press and hold VOLUME+/- button on the unit to adjust the volume output.

## *KODAK PICTURE CD / JPEG CD PLAYBACK*

Slide show of Kodak Picture CD after being loaded begins automatically.
Folders of JPEG picture CD after being loaded are displayed on the TV screen; use the navigation buttons to select the desired folder and then press OK button to confirm.
The files in this folder are displayed and you can select your favourable pictures using the up/down navigation buttons and press OK button to start playback.

## KODAK PICTURE CD/JPEG CD OPERATIONS

### 1. PLAY MODES

Press REPEAT1/ALL button to change play mode.
During playback, press STOP button to stop picture playback.

### 2. SKIP TO NEXT/PREVIOUS PICTURE

Press NEXT button to skip to the next picture or PREVIOUS button to the previous picture.

### 3. PICTURE ROTATIONS

Press RIGHT and LEFT navigation buttons to rotate the picture Clockwise and counter clockwise respectively.

### 4. PICTURE FLIPS

Press UP NAVIGATION button to flip the picture vertically.
Press DOWN NAVIGATION button to flip the picture horizontally.

### 5. PICTURE ZOOM IN/OUT

Press ZOOM button continuously ,the picture zooms in and out.
If the picture is enlarged, you may use the navigation buttons to view blocked parts of the picture.

## EXTERNAL MEMORY MEDIA OPERATION (USB&SD/MMC CARD)

### Prepare the player for External Memory media operation

1. Slide the POWER switch to ON position, plug a USB data traveller filled with Audio/video files into the USB port or Insert the SD/MMC card with the label side facing up into the card slot, the USB or the SD/MMC card is successfully detected and read after a few seconds, at the same time, the TV screen will show all its folders.
2. You may play the files stored in the storage media much in the same way as you do the Mp3 disc.

Note: Press DVD/USB/CARD button to switch among disc, USB and card modes directly if the USB or card is inserted into the unit.
**(The max. 32G memory size of USB/SD which can be supported.)**

# TV OPERATIONS

## GET STARTED

- Be sure your player is connected to the TV antenna properly;
- Power on the player and press the TV/DVD button on the remote or press and hold DVD/TV&SETUP button on the unit to switch to TV Mode.
- Before operate the TV, please search the TV channels first as the below instruction of the video quality setup.

## SEARCH A PROGRAM

- Press navigation UP/DOWN button once, the channel number changes. A desired channel can be reached using these two keys.
- Once the desired channel is selected, it will start broadcasting the selected channel immediately.
- To select channel directly by inputting the channel number via numeric buttons.

# INITIAL SETTINGS

Initial settings page is for you to make your preferred settings up for your player. Once the initial settings are done they are retained in the CPU of the player until otherwise modified.

## COMMON PROCEDURES FOR INITIAL SETTINGS

1. Press SETUP button.
2. Use the navigation buttons to select the item you want to modify, press OK button to confirm, setting page with further setting items displayed shows on the TV screen. Again use navigation buttons to make changes. Press again OK button to confirm modifications.
3. Use navigation buttons to switch to another setting on the main setting page.
4. Press SETUP button to exit main setting page.

## 1. GENERAL SETUP

**1.1 TV DISPLAY -** it is used to select the TV scan mode, please set as per your TV set.
Options: Normal/Ps
Normal Lb
Wide

**1.2 ANGLE MARK -** it is used to select whether the multi-angle icon is displayed on the screen or not when a multi-angle DVD disc is playing.
Options: On-show the angle mark.
Off-hide the angle mark.

**1.3 OSD LANGUAGE -** it is used to select different On Screen Display language for different user.

**1.4 SCREEN SAVER -** when the player is not in used for several minutes, a running DVD logo will move across the TV screen to protect the TV screen.
Options: On: Screen saver is enabled
Off: Screen saver is disabled

## 2. AUDIO SETUP (DVD ONLY)

**2.1 DOWNMIX**
Options: Lt/Rt - Left/Right mix mode
Stereo - Select this option if you don't have a 5.1 channels amplifier.

## 3. VIDEO QUALITY SETUP

**3.1 BRIGHTNESS -** to set the brightness for display.
**3.2 CONTRAST -** to set the contrast effect for display.
**3.3 HUE -** to set the hue for display.
**3.4 SATURATION -** to set the saturation for display.
**3.5 TV -** it is used to set the TV.(The item is only available at TV mode). Highlight the TV item, and enter it by pressing OK button. There are two items showing on the screen as below:
Auto Search - select it to proceed the auto search.
TV System - it is used to select a corresponding TV system for your TV receiver.

## *4. SYSTEM SETUP (DVD ONLY)*

Please follow the below steps to enter the System Page: First, power on the unit with the disc tray is empty or the disc door is opened, then press SETUP button and enter the System Page by pressing NAVIGATION buttons. Or during playback, press STOP button twice, and then press SETUP button to enter system setup page.

**4.1 TV TYPE -** it is used to select the TV mode.
Please select this option as per your TV set.

**4.2 AUDIO -** select preferred audio language.
(DVD only - need disc software support)

**4.3 SUBTITLE -** select preferred subtitle language.
(DVD only - need disc software support)

**4.4** DISC **MENU -** select preferred disc menu language.
(DVD only - need disc software support)

**4.5 PARENTAL -** select rating levels.
(DVD only - need disc software support)

**4.6 PASSWORD**
Option: Change - Select it to change password.
Procedure to change password as following:
1) Enter old password in the Old Password row
2) Enter new password in the New Password row
3) Enter the new password again in the Confirm Pwd row
The user password is "0000". You may reset the password if you forget the old password by using the supervisor password: 1389

**4.7 DEFAULT -** Reset to factory settings.

## *DISC HANDLING PRECAUTIONS*

- Hold the disc by the edge so the surface will not be soiled with finger prints. Finger prints, dirt and scratches can cause skipping and distortion.

- Do not write on the label side with a ball-point pen or other writing utensils.
- Do not apply benzine, thinner, and liquid that prevents against static electricity.

- Be careful not to drop or bend the disc.
- Install only one disc on the disc tray.
- Do not try to close the disc tray when the disc is not installed properly.

- Be sure to store the disc in its case when not in use.

# *SPECIFICATIONS*

Power source: AC 100-240V~ 50/60Hz
DC: 9V-12V
Power consumption: 10W
Operating Temperature Range: +5°C to +35°C
Continuous playing time: 120 minutes
Dimensions: 208(L) x 167.6(W) x 38.80(H)mm
Operating Humidity Range: 10 % to 75 %

# TROUBLESHOOTING

If your DVD player does not seem to be functioning properly, check the items below before you contact an authorized service center.

| Symptom | Check |
|---|---|
| Power does not turn on or suddenly turns off. | • Make sure the AC/DC adapter is securely plugged into an AC outlet.<br>• Turn the power off and then back on. |
| No picture or sound | • Check that the A/V cables are securely connected.<br>• Check that the disc is a DVD, DVD-RW or AUDIO CD.<br>• Do not use a disc that has scratches or dirt.<br>• Check that the label-side of the disc is facing up.<br>• The pick-up lens of the DVD player may be dirty. Contact the service center for lens cleaning.<br>• Check that the TV channel is set to VIDEO or AV if viewing with a TV. |
| No sound | • Check that the display panel is open. If it is closed, audio will not be output to the speakers.<br>• Check the volume setting. If set to zero, turn up volume level.<br>• Check that the headphones are plugged into the PHONES socket.<br>Speakers cannot be used with the headphones. |
| No picture and sound | • Check the AC/DC Adapter is properly connected. |
| Distorted video or sound | • Use a disc without scratches or dents. |

## IMPORTANT SAFETY INSTRUCTIONS

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- When AC/DC adapter is used as the disconnect device, the disconnect device shall remain readily operable. To be completely disconnected the power input, the AC/DC adapter shall be disconnected from the mains completely.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Minimum distances 2.0cm around the apparatus for sufficient ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- The use of apparatus is in tropical and/or moderate climates.
- Attention should be drawn to the environmental aspects of battery disposal.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- The marking plate is located at the bottom of the apparatus.